

Quick Glance User Guide

 




The Bariatric II mattress is a 3 cell alternating pressure therapy, full mattress replacement system. It is suitable for patients up to and including category 4 pressure ulcers and with a weight limit up to 50 stone.

- 1. Place mattress on bedframe, ensuring umbilical cord is at foot end and 'feet' symbol is facing up.
- 2. Attach mattress straps to moving parts of bed frame. Fig 1
- 3. Position control unit on end of bed (or a firm surface). Fig 2
- 4. Attach umbilical cord to control unit by depressing lever on top of the handle and align with the ports on control box. Fig 3
- 5. Attach mains lead. Fig 3
- 6. Switch on.



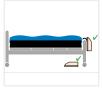 




CPR Tag

Ensure the CPR tag sealing connectors are pushed firmly onto the air pipes.

Fig. 2

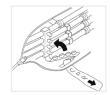

Transport Function

Remove the umilical cord from the control unit and seal with the transport cap.

Leaflet Code: LL281
Need Assistance?
Call 01422 233 136 (8:30am - 5pm)
or 0800 037 0234 (out of office hours)

Operation



Power
Press for 2 secs to switch on/of

В

С

D E



Alarm Mute

Mutes the audible alarm for 20mins. Refer to user guide for detailed instructions



Alternating/Static

Switches between alternating and static.
Reverts to alternating after 1hr



Pressure Adjustment

Press '+/-' to increase or decrease the pressure setting.



. Max Inflation

Rapidly inflates mattress to maximum static pressure. Reverts after 20mins.



Lock/unlock

Locks/unlocks the selected function. Mute remains operational. 'Max' and 'A/S' buttons still revert if selected.

Troubleshooting

Red alarm light will flash and audible alarm sound.



Alternation Failure

Power Failure

Check CPR tag and umbilical cord are attached correctly Check all air hoses/cells within mattress. Switch off/on.

Check CPR tag and umbilical cord are attached correctly Check all air hoses/cells within mattress. Switch off/on.

Disconnect umbilical cord to reduce pressure. Check for twists/kinks in air hoses. Switch off/on

Disconnect umbilical cord to reduce pressure. Check for twists/kinks in air hoses. Switch off/on

Check mains cable is plugged in and switched on. Check fuse plug and control unit