




QUANTUM REHAB®


# Keyless Locking

## Quick Reference Guide

**GC/GC2 CONTROLLER**

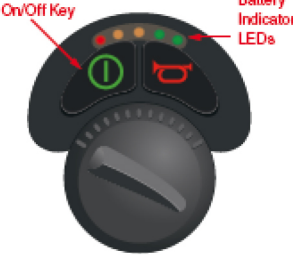

**INDICATION**



Battery Indicator LEDs flash in sequence


**TO UNLOCK:**

Hold Joystick forward until beep, then pull Joystick back until beep. Unit is now unlocked


**TO LOCK:**

While powered on, hold On/Off Key until beep, then release. Push Joystick forward until beep, then pull Joystick back until beep. Unit is now locked

**VR2 CONTROLLER**

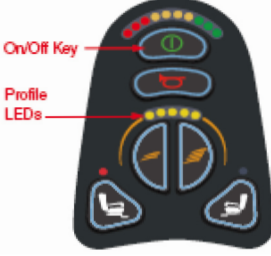

**INDICATION**

 

Profile LEDs scroll left to right


**TO UNLOCK:**

Hold Joystick forward until beep, then pull Joystick back until beep. There will be a long beep indicating unit is unlocked.

 
**TO LOCK:**

While powered on, hold On/Off Key until beep, then release. Push Joystick forward until beep, then pull Joystick back until beep. Unit is now locked

**R-NET CONTROLLER**



**INDICATION**



Profile LEDs scroll left to right


**TO UNLOCK:**

Hold Joystick forward until beep, then pull Joystick back until beep. There will be a long beep indicating unit is unlocked.


**TO LOCK:**

While powered on, hold On/Off Key until beep, then release. Push Joystick forward until beep, then pull Joystick back until beep. Unit is now locked

**REMOTE PLUS CONTROLLER**

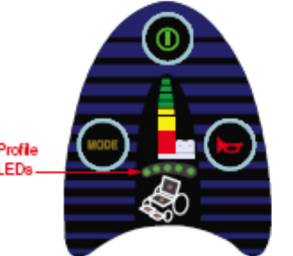


**INDICATION**



Profile LEDs scroll left to right


**TO UNLOCK:**

Insert and then remove special 3-pin key to unlock or unplug Joystick cable to reset.



**TO LOCK:**


Insert and then remove special 3-pin key to lock.



**VSI CONTROLLER**



**INDICATION**



Profile LEDs scroll left to right

**TO UNLOCK:**

Push Joystick forward until beep then pull joystick back until beep. Unit is now unlocked.

**TO LOCK:**

Hold On/Off Key until beep, then release. Push Joystick forward until beep, then pull Joystick back until beep. There will be a long beep indicating unit is locked.

**Q-LOGIC CONTROLLER**



**INDICATION**



LCD Display states 'System Lock.'

**TO UNLOCK:**

Push joystick forward until beep, release Joystick to centre, pull Joystick back until beep. Unit is now unlocked.

**TO LOCK:**

Push Mode Select Lever forward until unit shuts off. Use an external switch or set a profile to AUX and lock will appear in AUX menu. (Must be programmed for lock)