

Keyless Locking

Quick Reference Guide



INDICATION



TO UNLOCK:

Hold Joystick forward until beep, then pull Joystick back until beep. Unit is now unlocked

While powered on, hold On/Off Kev forward until beep, then pull Joystick back until beep. Unit is now locked

REMOTE PLUS CONTROLLER

INDICATION



Profile LEDs scroll left to riaht

TO UNLOCK:

Insert and then remove special 3-pin key to unlock or unplug Joystick 3-pin Key cable to reset.

(KEYJAZ1001)

TO LOCK:

Insert and then remove special 3-pin key to lock.



VR2 CONTROLLER



INDICATION



Profile LEDs scroll left to right

TO UNLOCK:

Hold Joystick forward until beep, then pull Joystick back until beep. There will be a long beep indicating unit is unlocked.

TO LOCK:

While powered on, hold On/Off Key @ until beep, then release. Push Joystick forward until beep, then pull Joystick back until beep. Unit is now locked

VSI CONTROLLER



INDICATION



Profile LEDs scroll left to riaht

TO UNLOCK:

Push Joystick forward until beep then pull iovstick back until beep. Unit is now unlocked.

TO LOCK:

Hold On/Off Key 🐽 until beep, then release. Push Joystick forward until beep, then pull Joystick back until beep. There will be a long beep indicating unit is locked.

R-NET CONTROLLER



INDICATION



Profile LEDs scroll left to right

TO UNLOCK:

Hold Joystick forward until beep, then pull Joystick back until beep. There will be a long beep indicating unit is unlocked.

TO LOCK:

While powered on, hold On/Off Key until beep, then release. Push Joystick forward until beep, then pull Joystick back until beep. Unit is now locked

Q-LOGIC CONTROLLER



INDICATION



LCD Display states 'System Lock.'

TO UNLOCK:

Push joystick forward until beep, release Joystick to centre, pull Joystick back until beep. Unit is now unlocked.

TO LOCK:

Push Mode Select Lever 🛭 forward until unit shuts off. Use an external switch or set a profile to AUX and lock will appear in AUX menu. (Must be programmed for lock)