1



Thread through the sucker into the bottom half of the hole.


2



This is what the sucker should look like once full inserted.
You will the need to move it up to the top half.



This is what the sucker will look like once you move it through to the top half.

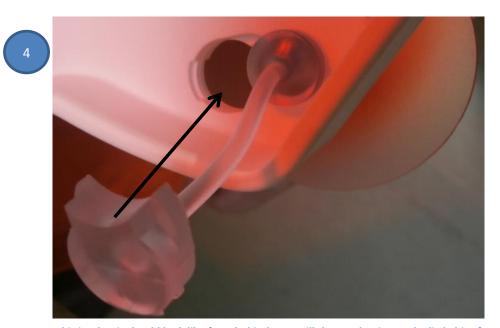

This is what it should look like from behind. You will the need to insert the little bit of the sucker into the spare hole.



This is what the sucker should look like once fully inserted.